# DEFENDER

## **NVECTECH**

Manual for the thermal imaging device



## CONTENT

INTRODUCTION	2
FEATURES  Detection range Application scenarios Warning Package content Charging Buttons Lenses settings Pseudo colors pallete Al Range - finder	3 4 4 4 5 5 5 6 6 7 7
TOP MENU	8
MAIN MENU  Joystick Image Reticle WLAN+File Settings Sensors System	11 11 12 12 12 13 13
APPLICATION	14
SPECIFICATION	1!

## **INTRODUCTION**

#### **DEVICE DESCRIPTION**


NVECTECH Defender: the highest quality in the world of thermal imaging technologies.

Especially for extreme conditions,

NVECTECH Ukraine has developed the Defender thermal imaging device.

It is fully optimized for operation in challenging environments and equipped with advanced technologies.

It is a benchmark in the world of thermal imaging technologies.

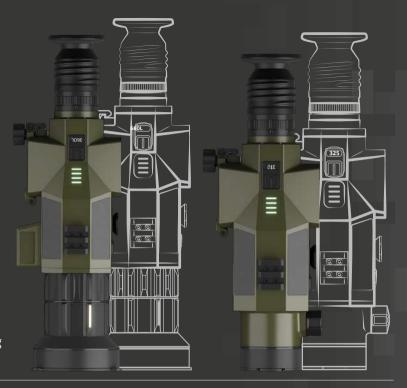

#### UKRAINE **\_\_\_**

## **FEATURES**

The body is made of aviation aluminum alloy housing: Impact resistance 10000J.



The new most sensitive sensor <20mK (384x288px, 640x512px) Even faster, even more sensitive.

Height and temperature sensors:
Additional analysis of the of the environment.



Rangefinder 1200m: Multifunctional rangefinder.

## The software is based on Al:

Thanks to more than five sensors the device adapts itself to the needs of the user.



**User-friendly controls:**Durable, comfortable and sensitive.

#### Wide range of lenses:


19 mm – 1200 m; 25 mm – 1500 m; 35 mm – 2000 m; 20-60 mm – 3400 m.



## The latest lenses with double focus:

Allows you to clearly see more more distant objects.

#### **DETECTION RANGE**

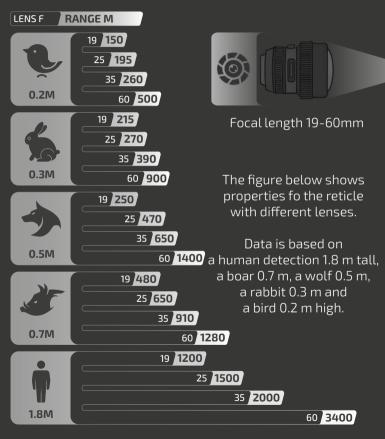

#### **APPLICATION SCENARIOS**

Observation of animals Adventures in nature Protection of law and order Emergency search and rescue

#### **WARNING**



Avoid hard objects



Do not point the lens directly at the sun or high-temperature light sources



Do not overuse the device cold or hot environment



Charge the battery once every three months when it was not in use



Make sure the Type-C cover is tight closed in the water environment



Do not disassemble or modify the device in any way

#### **PACKAGE CONTENT**



ONE DEFENDER DEVICE



TWO VIEWERS (BASIC AND «CAT'S EYE»)



Before using the battery should be fully charged before use.

**Note:** To charge the battery the kit includes a charger



PORTABLE BATTERY CHARGER



CABLE TYPE-C -USB



2 SETS OF RECHARGEABLE BATTERIES 18650



FASTENERS WEAVER, SCREWS




**ROBUST CASE** 



**INSTRUCTION** 



OCULAR (OPTIONAL)

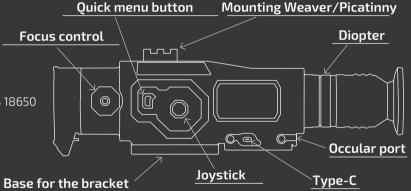

**Note:** 1 bulb - <= 25% charge,

2 bulb - <=50% charge,

3 bulb - <= 75% charge,

4 bulb - <=100% charge,

The indicator blinks while charging.

#### **BUTTONS**



ON/OFF

Hold for 3 seconds
to turn on/off.
Press to
enter/exit standby mode
Double-click to restart the matrix (shutter)



QUICK MENU BUTTON

Click to access the quick



TILT THE JOYSTICK TO THE LEFT Color palette selection



TILT THE JOYSTICK TO THE RIGHT «Picture-in-picture» function



TILT THE JOYSTICK UPWARDS Hide/show information panel



TILT THE JOYSTICK DOWN

On/Off Compass



PRESS THE CENTRE OF JOYSTICK

On/Off. Gyroscope (without LRF) | Target coordinates On/Off

**QUICK MENU**Hide/Show information panel

On/Off Compass

4

Color palette

On/Off PIP

P

Determining the target coordinates



PRESS THE CENTRE OF JOYSTICK

One click – photo capture, double click – main menu Long press for 3 seconds – video recording



TILT THE JOYSTICK TO THE LEFT

On/Off Ballistic calculator



TILT THE JOYSTICK TO THE RIGHT

On/Off Rangefinder (Al or LRF)



TILT THE JOYSTICK UPWARDS


**Z**oom in⊕



TILT THE JOYSTICK DOWN

Zoom out 🔾

#### JOYSTICK

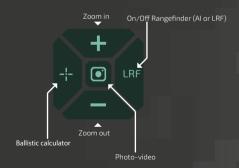

#### **PSEUDOCOLORS PALLETE**



BLACKHOT



VIOLET



WHITEHOT



GOLDEN



REDHOT



GREEN



**RIGHT JOYSTICK PRESS** 

Changes the pseudocolor to the following

Pseudocolor palette label

#### **ADJUSTING LENSES**

#### Diopter adjustment

Adjust the position by looking through the eyepiece eyepiece diopter level to optimize sharpness image on the AMOLED display.



#### AI RANGE-FINDER





#### **LEFT JOYSTICK PRESS**

Acnivate Al Range-finder function

Al Range-finder label

#### **Focus**

Adjust the lens focus manually.



## **MAIN INFO BAR**



- GPS H Height above sea level in meters.
- GPS N North coordinate.
- GPS E East coordinate.
- 4 Compass
- **S** Vertical and horizontal tilt
- 6 Azimuth is always displayed when compass is on
- 7 Temperature
- 8 LRF data
- Battery charge level.
- 19:04 Time.



NorthEast

East

SouthEast

South

SouthWest

West

NorthWest

North

## **TOP MENU BAR**



## **IN MENU DESCRIPTION**

#### **IMAGE BUTTON**

Description of the functions of the Picture menu

#### **BALISTIC CALCULATOR**

Description of the functions of the Ballistic Calculator menu

#### WIRE + FILE

Description of the functions of the "Wire + File" menu

#### **SETTINGS**

Description of the functions of the Settings menu

#### **SENSORS**

Description of the "Sensors" menu functions

#### **SYSTEM**

Description of the System menu functions

## **MAIN MENU**



#### CENTRAL JOYSTICK DOUBLE PRESS

To enter the menu settings.

**Note:** select by moving the lever and short press the lever to confirm the selection.



#### **IMAGE**

Thermal image processing settings.



#### **RFTICLE**

Adjusting the reticle properties.



#### WLAN+FILE

Wireless connection and saved files.



#### **SETTINGS**

General settings of monocular.



#### **SENSORS**

Monocular sensor settings.



#### **SYSTEM**

Basic settings and system lock.



**IMAGE** Thermal image processing settings.

#### **BRIGHTNESS**

Brightness of the picture.

#### **SHARPNESS**

Sharpness of the picture.

#### NOISE

Noise level of the picture.

#### **CONTRAST**

Contrast of the picture.

#### MENU

Brightness of the menu buttons.

#### **SHOW MENU**

Show or hide the top menu.

#### MODE

Image enhancement mode - WDR or OBJECT.



### BALLISTIC CALCULATOR

#### BC. DIST.

Saved setting profiles for the calculator.

#### **BALLISTIC**

Adjustment of ballistic calculator settings.

#### ZEROING

Settings for zeroing the scope.

#### **RETICLE**

Adjustment of the scope reticle.



**WLAN+FILE** Wireless connection and saved files.

Makes monocular position visible!!!

#### HOTSPOT

ON/OFF wireless connection.

#### **FOTO**

Saved photos.

#### **VIDEO**

Saved videos.

#### **OBJECTIVE**

Saved coordinates.

#### RAV

Saved videos of a shot

**SETTINGS** General settings of monocular.

#### PIP

ON/OFF picture in picture function.

#### BLINDPIXEL

Fixes damaged pixels on the thermal imaging matrix.

#### **DISPLAY**

Brightness, color, PIP (picture-in-picture).

#### ZOOM

Smooth & rapid zoom.

#### TRACKING

Turns the hottest areas on/off.

#### RANGEFINDER

Al set - set. Al distance, LRF and Al - on/off

**SENSORS** Monocular sensor settings.

#### GPS

ON/OFF GPS and separately height above sea level.

#### TEMPERAT.

Set the operating mode of the temperature sensor.

#### **GYROSCOPE**

On/Off. Gyroscope.

#### **ORIENTATION**

Compass and azimuth mode.

#### LRF

Changes mode of the Range-finder (Al or MIL).

#### JOYSTICK

Setting up the joystick operation and its sensitivity.



SYSTEM Basic settings and system lock.

#### **UPDATE**

Update software.

#### **RESTART**

Restart monocular.

#### DATE/TIME

Set the time and date.

#### LANGUAGE

Set the language.


#### **BATTERY INDICATION**

Setting the battery indicator.

#### **BLOCK**

Set the password to start the scope.

## **APPLICATION**

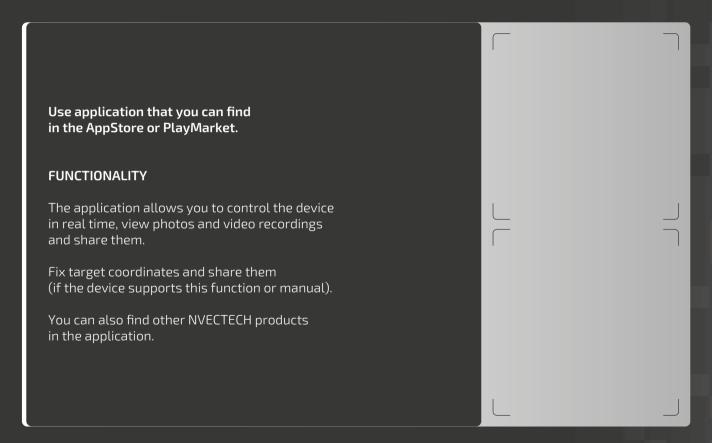

## Osykam Die Genolder

#### **ОВМОРІТРИОНДУ**

NVECTECH Defender Ocular - додатковий модуль для NVECTECH Defender Ocular - an additional attachment прилада Defender. for the Defender.


Додатковий окуляр до тепловізійного приціла Additional lens for the Defender thermal imagin Defender проектує зображення з projects the image from приціла за допомогою кабеля, що дозволяє вести the scope via a cable, allowing firing from behind cover. вогонь 13-3а укриття.




UKRAINE **E** 



## **SPECIFICATION**

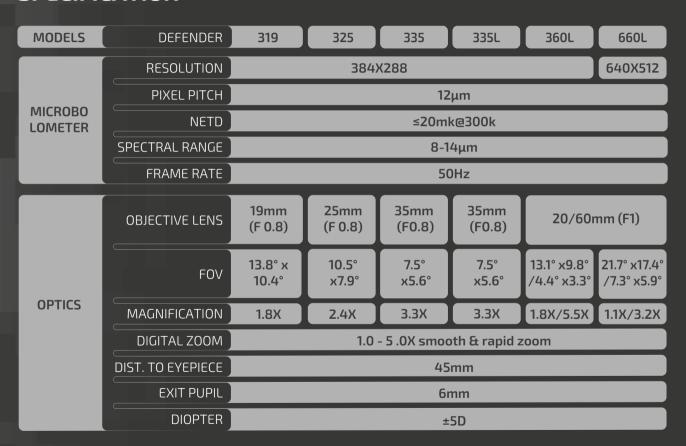

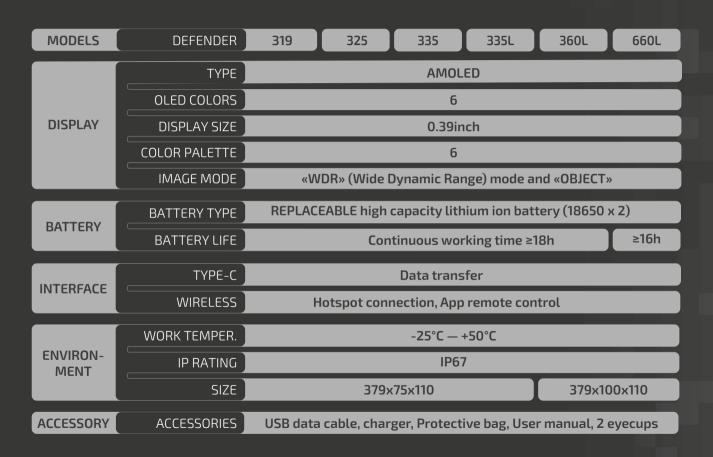



## **NVECTECH**

Model:

Serial number:

Date of sale:

Seal and signature of the seller:

Kosmichna st. 49-g, Dnipro, Ukraine

site: www.nvectech.com www.nvectech.ua e-mail: info@nvectech.com Manufacturer: NVECTECH LLC

- +38 093 698 11 67
- +38 098 758 75 85
- +38 063 785 78 55
- +38 095 761 13 92

Warranty 2 years!







