

Algorithm for updating the firmware of DEFENDER thermal imaging devices:

1. Turn on the DEFENDER device.
2. Connect the DEFENDER device to the computer via a USB Type-C cable. After connection, the computer will detect the storage and grant access to the DEFENDER's internal memory.
3. Open the main menu of the sight (double-press the joystick), go to "System," and make sure the "UVC" parameter is set to "Off."
4. Copy the file upgrade.pkg for your specific DEFENDER model to the Storage folder in the device's internal memory. You can download the file for your model here:
<https://nvectech.com/downloads>
5. Disconnect the device from the computer.
6. In the DEFENDER menu, find "System" (the folder with the "S" icon), then the "Update" submenu, and press "Yes."
7. Wait for the update to finish. The device will restart.
8. The firmware update is complete; you can use the device.